

Features


- © Polyethylene main tank against chemical products and impact resistance. Capacities: 1.000, 1.500, 2.000 and 3.000 litres.
- © Washing and feeding kit tank.
- © Handwashing tank.
- © Frontal and lateral external level indicators.
- © Very reinforced chasis.
- © Pompe AR-1053 (3 membranes, 105 l/min., 50 atm)
- © Mono control (to the tractor)
- © Kickstand with rotating wheel
- © Fixed coupling with mouth or ring
- © Hydraulic mixed of large flow
- © Lighting system
- © Parking brake (wedges) in 1.000, 1.500, 2.000, 3.000 lts.
- © Service brake (hydraulic) in 2.000 and 3.000 lts.
- © Turbine framework made in polyester
- © 8 double diffusers
- © 16 anti drip sprayers, nozzles ATR
- © Multiplier 2 speeds and deadlock
- © Centrifuge clutch in an iron frame
- © 3 movement arms with double effect electro-distributor for a 4 faces treatment
- © Reinforced transmission
- © Back rubber as turbine protection

Accessories

- © Rotatory coupling
- © Piston or membrane pompes with different flows and pressures.
- © Homocinetic transmission.
- © Electrical controls (electrovalves).
- © Computer (automatic regulator).
- © Rinsing system robot.
- © Powder mixer.
- © Extensible axle. and different wheels.
- © Anti pollution control charger.

Mesures

CAPACITY	WIDTH (A)	LENGTH (B) (without coupling)
1.000 lts.	1250-1950 mm.	3100 mm.
1.500 lts.	1350-2100 mm.	3300 mm.
2.000 lts.	1450-2100 mm.	3600 mm.
3.000 lts.	1550-2100 mm.	3800 mm.

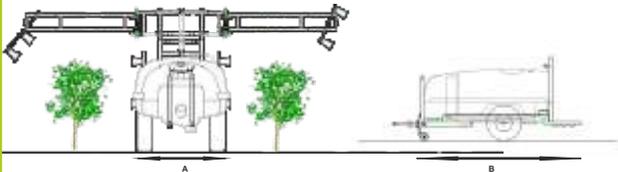

saHer

Avda. Mare de Déu de Montserrat, 100-102
 Polígon Industrial Sant Pere Molanta
 08799 Olèrdola - Barcelona - SPAIN
 Tel. +34 93 892 38 56 Fax. +34 93 818 08 69
 e-mail saher@saher.es - export@saher.es
 www.saher.es



Mist Blowers

saHer

Trailed

Mod. Multitub Plus 3 movements



Area distributor

Technology in Treatments





TRAILED MIST BLOWERS MULTITUB PLUS 3 MOVEMENTS




The SAHER mist blowers get a very fine drop thanks to a perfect mix with the air given by a turbine. It is possible to install a large number of outlets to get a best and homogeneous product distribution in the integral vineyard treatment.

Design movements hydraulic arms and possibility to personalise the treatment for two consecutive files (Fig.1) or alternate ones (Fig.2)

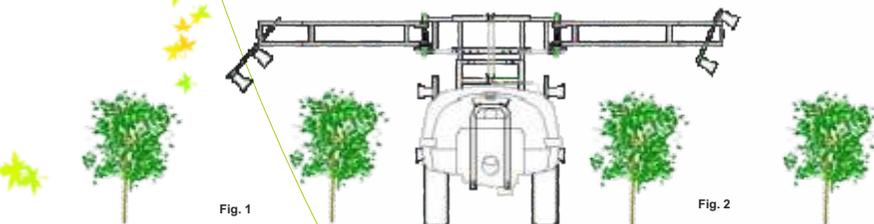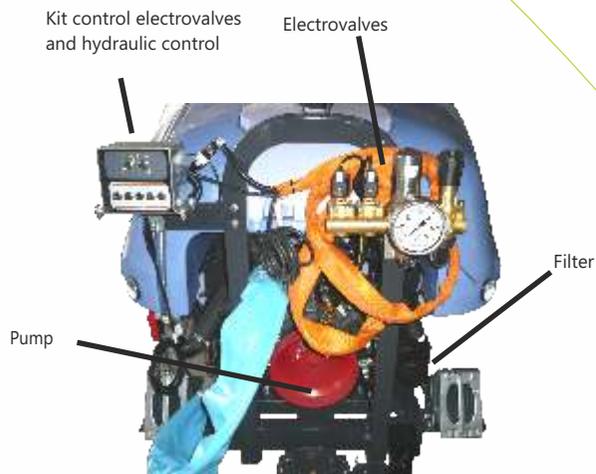

Movement hydraulic arms: up/down; individual open/close.

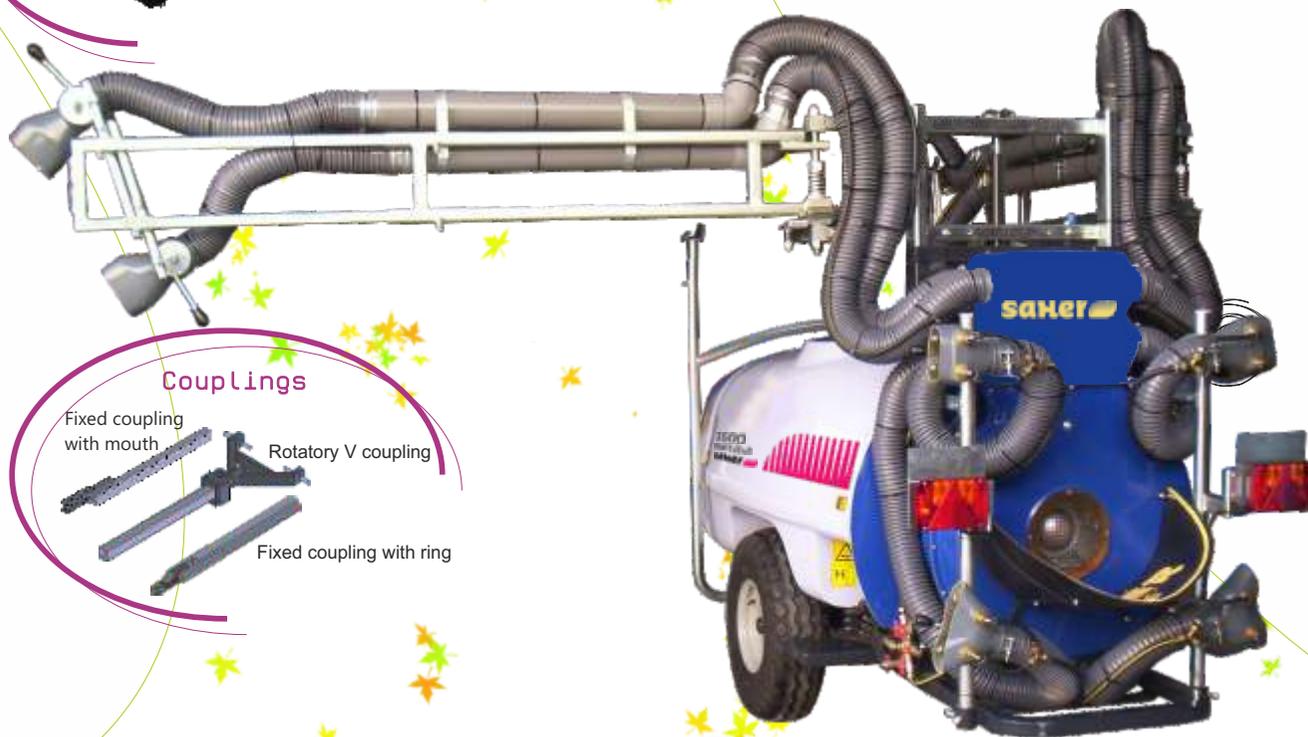

Wheels

1.000 lts.	1.500 lts.	2.000 lts.	3.000 lts.
10.0/80-12 8PR (serial)	10.0/75-15 12PR (serial)	10.0/75-15 12PR (serial)	11.5/80-15.3 14PR (serial)
10.0/75-15 12PR	400/60-15.5 14PR	11.5/80-15.3 14PR	400/60-15.5 14PR
	340/55-16 flotation	400/60-15.5 14PR	
		340/55-16 flotation	

