

## Features

- © Polyethylene main tank against chemical products and impact resistance.
- © Capacities: 1.000, 1.500, 2.000 and 3.000 litres.
- © Washing and feeding kit tank.
- © Handwashing tank.
- © Frontal and lateral external level indicators.
- © Very reinforced chasis.
- © Pompe AR-1053 (3 membranes, 105 l/min., 50 atm)
- © Kickstand with rotating wheel.
- © Fixed coupling with mouth or ring
- © Hydraulic mixed of large flow.
- © Lighting system.
- © Mono control (control to the tractor).
- © Parking brake (wedges) in 1.000, 1.500, 2.000, 3.000 lts.
- © Service brake (hydraulic) in 2.000 and 3.000 lts.
- © Faucet 1st drainpipe.
- © Reinforced transmission.
- © Charger and sulfate guns (not included).
- © Fan unit groups ø820.
- © 10 lateral air outlets.
- © 2 upper air outlets.
- © Adjustable propeller 8 slices.
- © 12 double anti drip sprayers.
- © Sprayer tube made in stainless steel.
- © Multiplier 2 speeds and deadlock.
- © Fan unit structure with air distributor made in st. steel.
- © Adjustable PVC outlets
- © Rinsing system robot.

## Accessories

- © Rotatory coupling.
- © Homocinetic transmission.
- © Fan unit clutch
- © Powder mixer.
- © Extensible axle.
- © Different axles and wheels.
- © Anti pollution control charger.
- © Back rubber propeller protection.
- © Piston or membrane pompes with different flows and pressures.
- © Electrical controls and sonar.
- © Low volume sprayers.
- © Upper customizable outlets
- © Ailerons.

Technology in Treatments


# saHer

Avda. Mare de Déu de Montserrat, 100-102  
 Polígon Industrial Sant Pere Molanta  
 08799 Olèrdola - Barcelona - SPAIN  
 Tel. +34 93 892 38 56 Fax. +34 93 818 08 69  
 e-mail saher@saher.es - export@saher.es  
 www.saher.es




## Mesures

CAPACITY	WIDTH (A)	LENGHT (B) (without coupling)
1.000 lts.	1250-1950 mm.	2800 mm.
1.500 lts.	1350-2100 mm.	2800 mm.
2.000 lts.	1450-2100 mm.	2950 mm.
3.000 lts.	1550-2100 mm.	3600 mm.

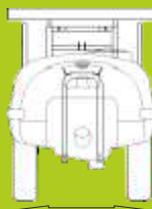

A

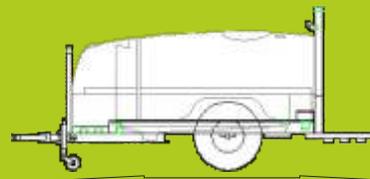

B

Area distributor

Atomizers

# saHer

Trailed  
 Mod. Orient




Technology in Treatments



# TRAILED ATOMIZER ORIENT



The SAHER atomizers have a fan unit composed by a structure made in stainless steel which function is to concentrate and to distribute the air produced by a Ø800 mm fan unit of adjustable flow. This air is directed by 5 outlets per side and 2 upper ones, which are addressable by hydraulic or manual arms. As this is a closed system, it is not possible the air loss. It is suitable for vineyard crops.

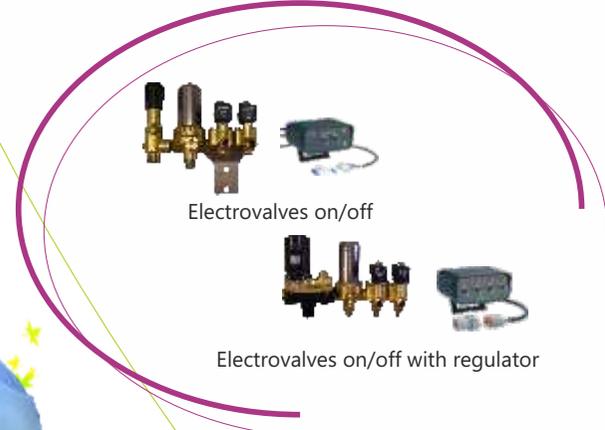

Wheels

1.000 lts.	1.500 lts.	2.000 lts.	3.000 lts.
10.0/80-12 8PR (serial)	10.0/80-12 8PR (serial)	10.0/75-15 10PR (serial)	11.5/80-15.3 14PR (serial)
10.0/75-15 10PR	10.0/75-15 10PR	11.5/80-15.3 14PR	400/60-15.5 14PR
	11.5/80-15.3 14PR	400/60-15.5 14PR	
	400/60-15.5 14PR	340/55-16 flotation	
	340/55-16 flotation		

